

INSTRUCTION MANUAL

Ref.: DM TEC B10

HIGHBAY CEILING SURFACE MOUNTING MOTION AND PRESENCE DETECTOR WHITE



TECHNICAL SPECIFICATIONS

|                                     |   |
|-------------------------------------|---|
| Power supply                        | 230V~ ±10% ~50/60Hz                             |
| Own Consumption                     | <1W   |
| Charge                              | 16A cos φ = 1                                   |
| LED                                 | 400W  |
| Incandescent lamps                  | 3.000W  |
| Halogen lamps 230V                  | 3.000W  |
| Halogen + electronic transformer    | 3.000W  |
| Halogen + ferromagnetic transformer | 2.400W  |
| Fluorescent                         | 1.300W (130μF)                                  |
| Relay status NO or NC               | Select from DINUY Configure APP                 |
| Detection angle                     | Circular, 360°                                  |
| Detection field                     | 360°, Ø16m at 10m high                          |
| Adjustments                         | DINUY Configure App                             |
| Brightness Level                    | 5 to 2000Lux, or Disabled                       |
| Timing                              | 1 seg. till 60 minutes                          |
| Sensitivity                         | 5 values adjustable through DINUY Configure App |
| Protection                          | IP40, Class II                                  |
| Working temperature                 | −10°C .. +45°C                                  |


CHARACTERISTICS

- “3 in 1” indoor detector, ceiling high-bay surface mounting with the following operating modes:
  - Motion Detector;
  - Presence Detector;
  - Twilight Switch.
- It has a switching channel with a 16A relay.
- ZCT (Zero Crossing Technology), which allows to protect the contactors of the relay and manage high loads.
- Highly sensitive PIR sensor, which detects the slightest movement within its coverage area.
- It incorporates a red LED indicator that helps test the correct motion detection of the device.
- It incorporates a blue LED indicator to identify that the detector is Bluetooth enabled.
- Configuration and adjustment through the DINUY CONFIGURE App.

CHARACTERISTICS

- “3 in 1” indoor detector, for flush ceiling mounted with the following operating modes:.


- **Motion Detector.** Installation in transit areas, corridors.

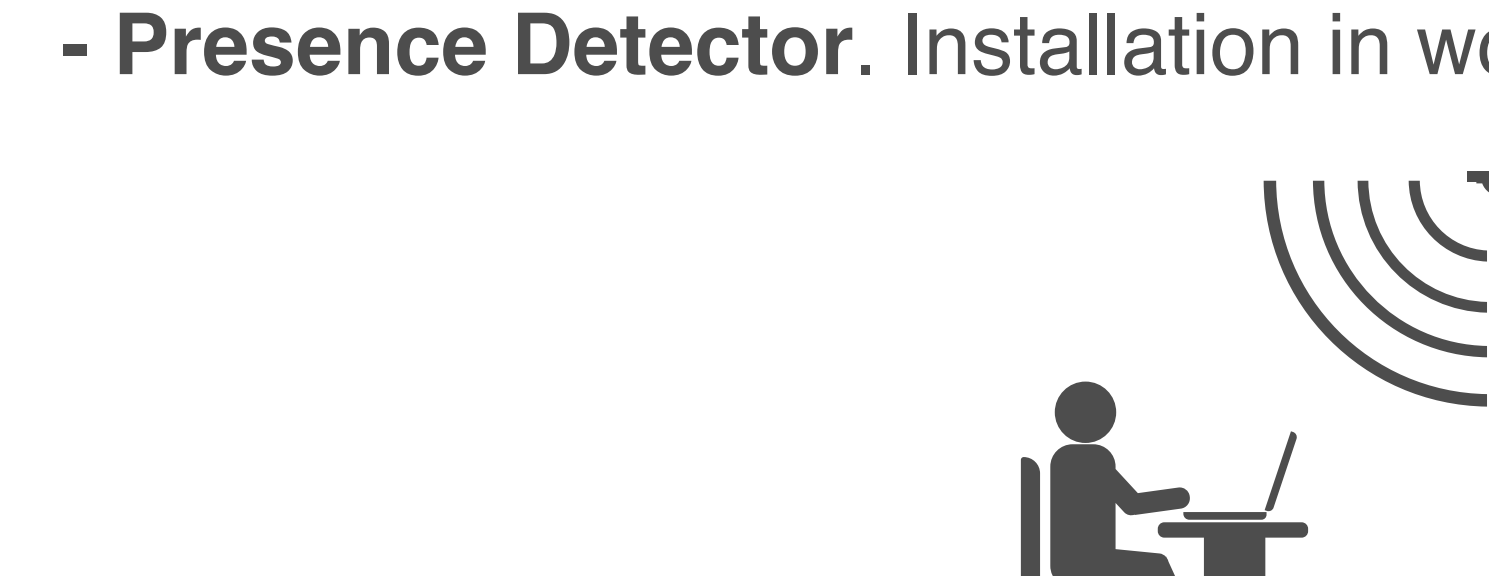

- **Presence Detector.** Installation in work areas, offices.



- **Twilight Switch.** Installation in interiors affected by outdoor lighting.

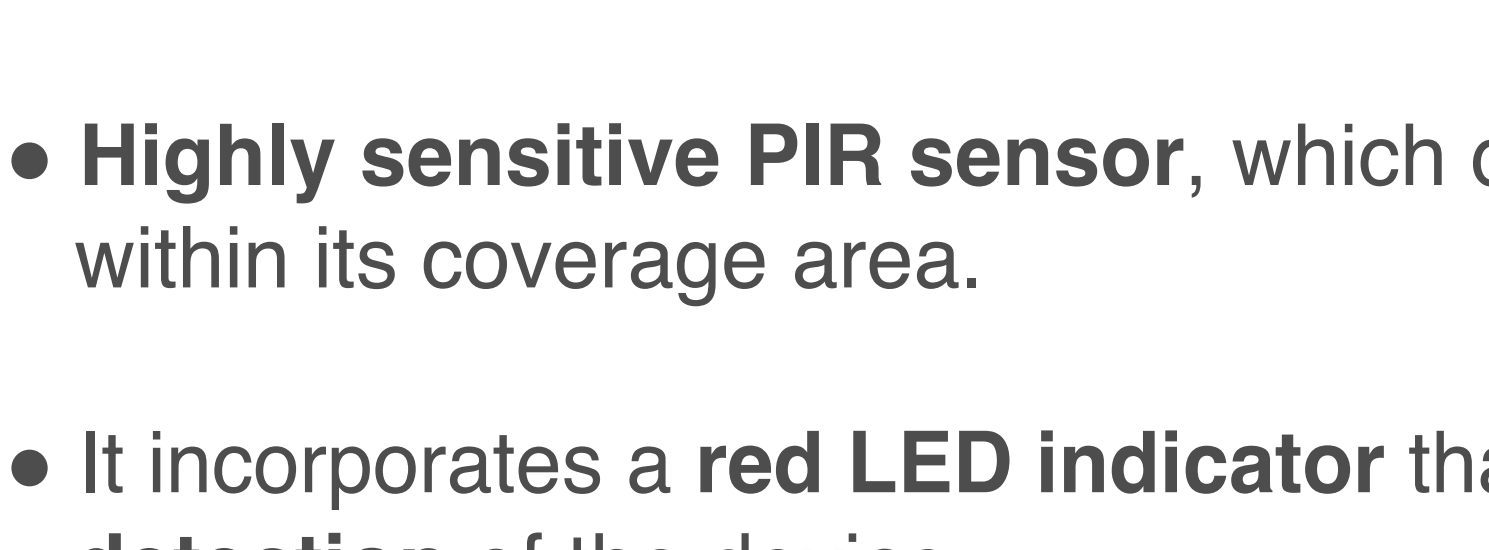


- It has a switching channel with a **16A relay**.
- **ZCT (Zero Crossing Technology)**, which allows to protect the contactors of the relay and manage high loads.
- **Highly sensitive PIR sensor**, which detects the slightest movement within its coverage area.
- It incorporates a **red LED indicator** that helps test the **correct motion detection** of the device.
- It incorporates a **blue LED indicator** to identify that the detector is **Bluetooth enabled**.
- **Configuration and adjustment** through the **DINUY CONFIGURE App**.

FUNCTIONING


- This detector automatically switches the lighting based on the detection of the slightest movement of people and the level of natural light.
- Possibility of connecting several detectors in parallel, which makes it possible to expand the area to be covered in a single lighting line.
- In Presence Detector mode, while the lighting is on due to the presence of a person within its coverage area, the sensor will compare the measured natural light with the setpoint set in the configuration (Brightness Parameter):
  - If the natural light is below the set Brightness setting, the timing will reset when new movement is detected and the lighting will continue on.
  - If the natural light is above the Brightness setting, the timer will not reset when new movement is detected and the lighting will turn off when the time set in the Timer expires.

DIMENSIONS

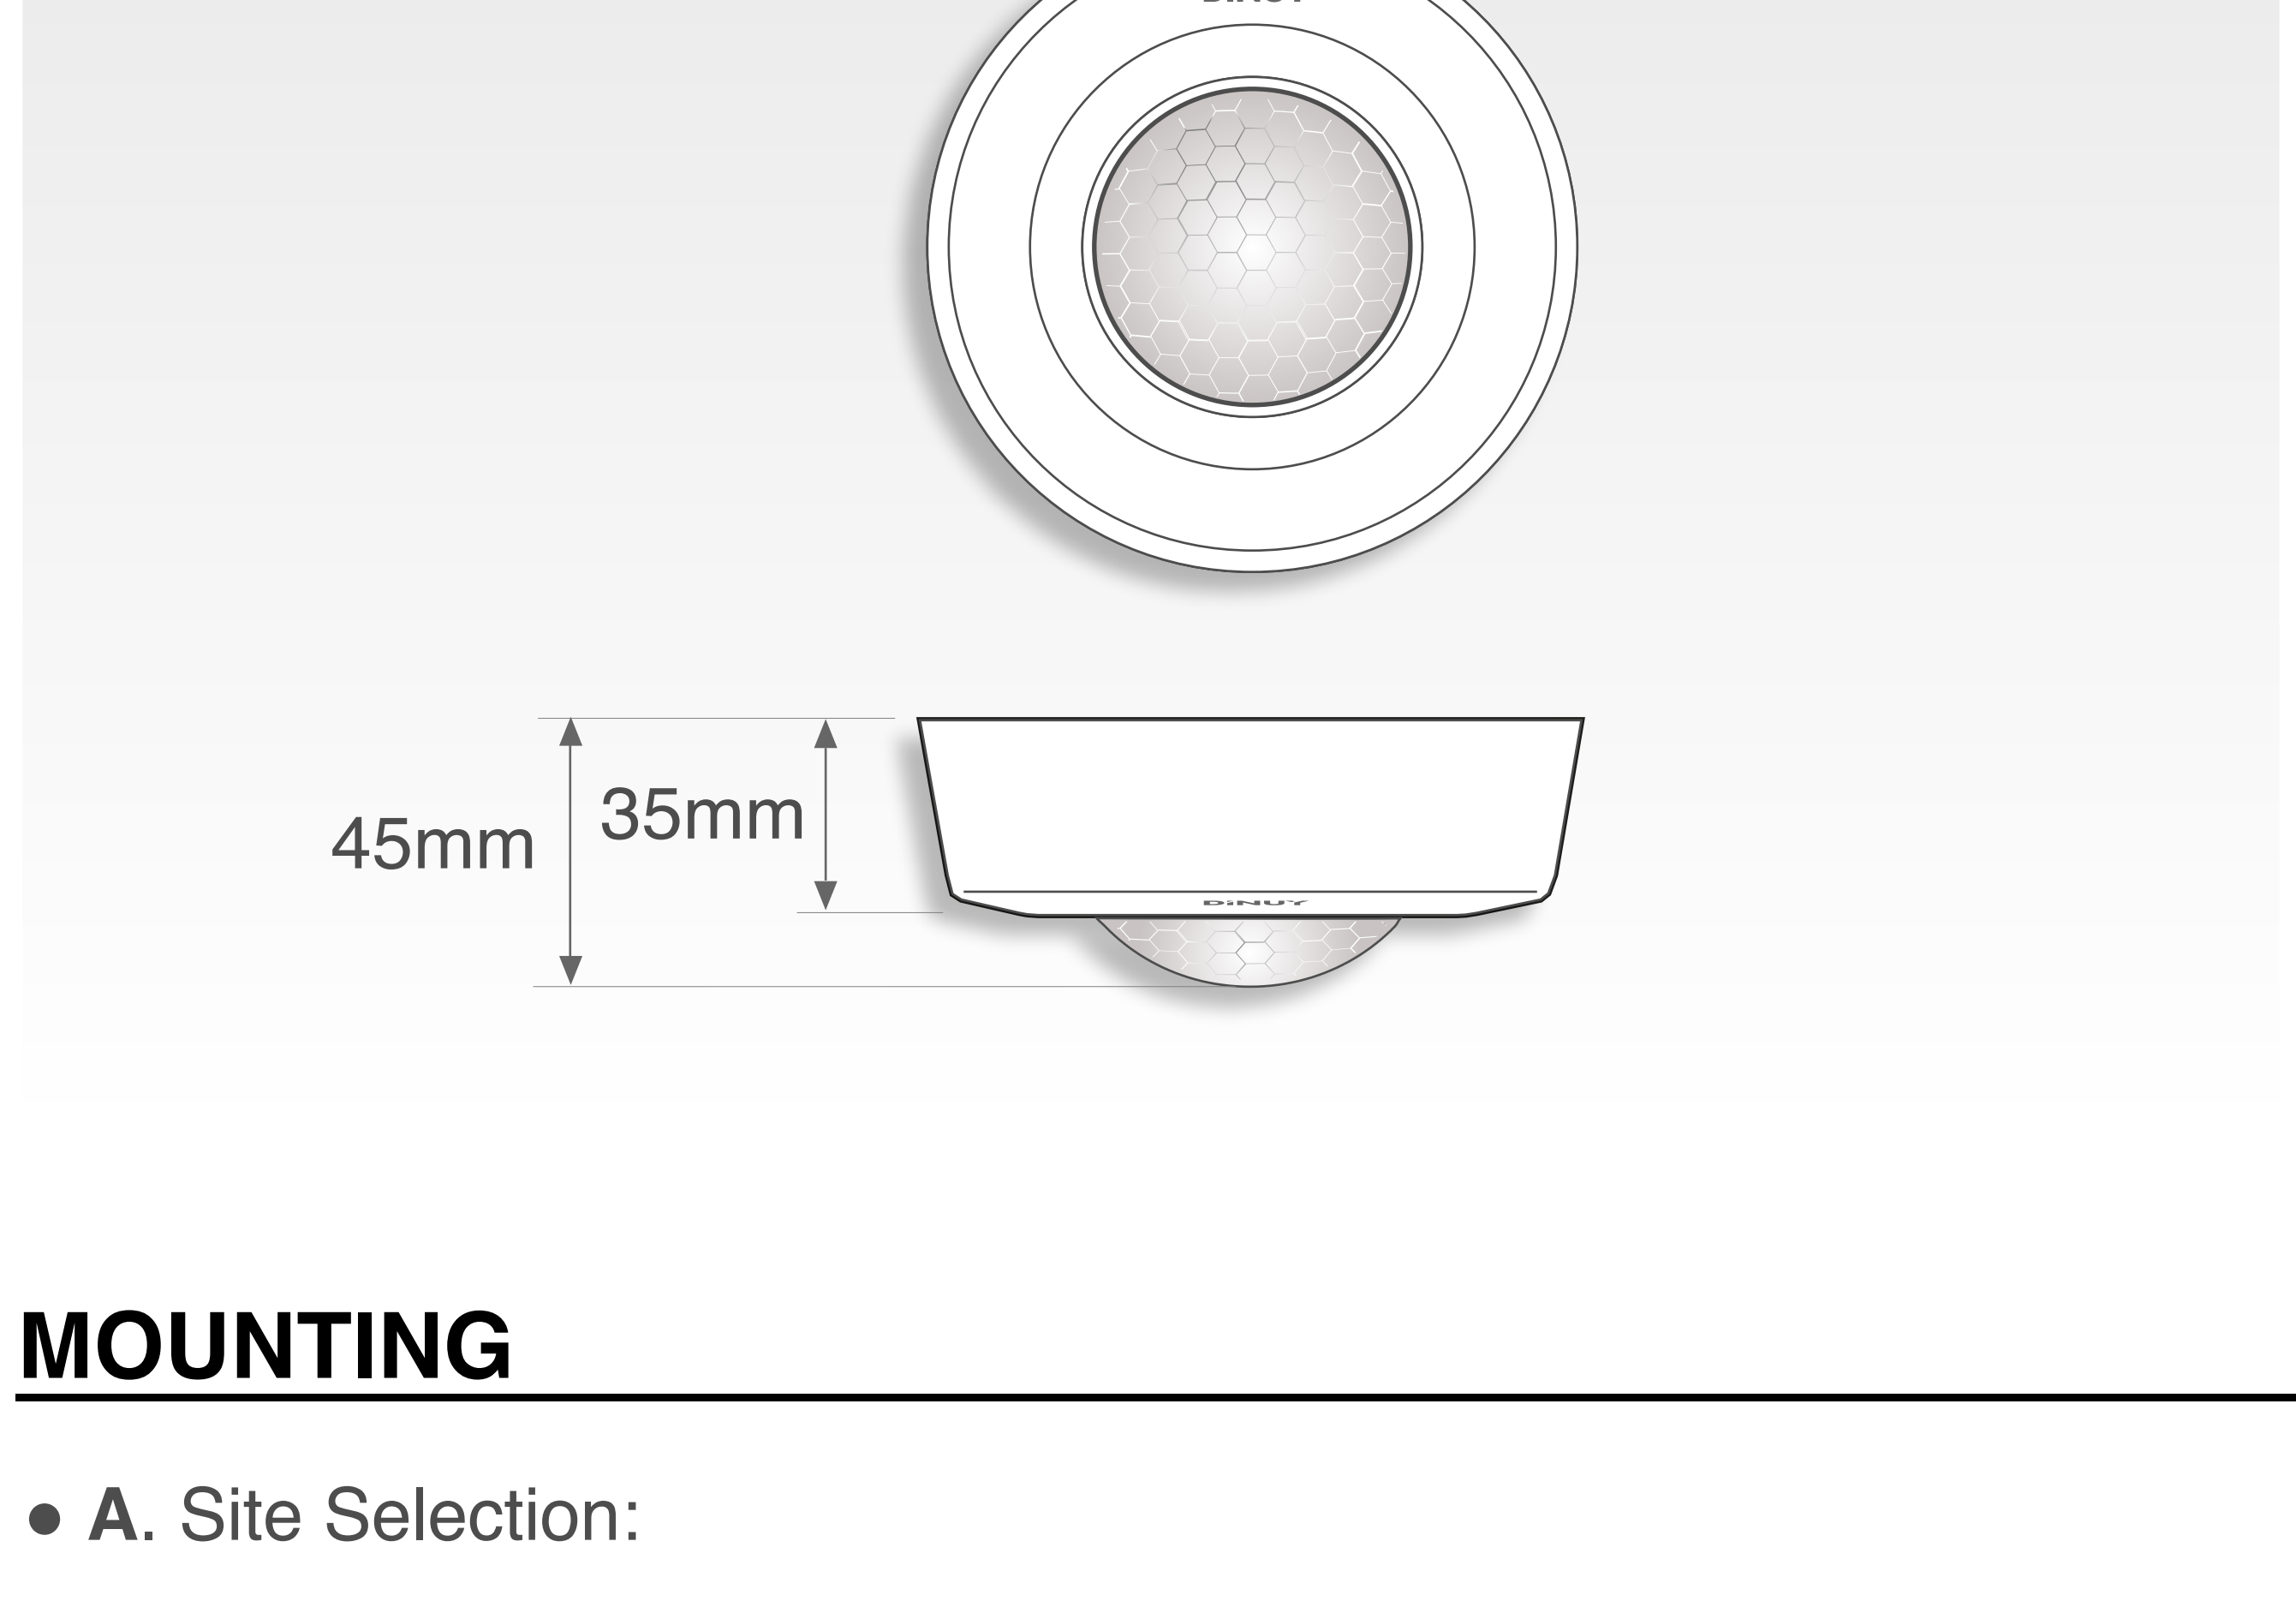


MOUNTING

- **A. Site Selection:**
  - **Do not aim the detector** at objects with **highly reflective surfaces** or those subject to **rapid temperature changes**.
  - **Do not install the detector** near **heat sources**.
  - **Do not aim the detector** towards light sources.
  - **Do not aim the detector** at **objects that move with the wind**.

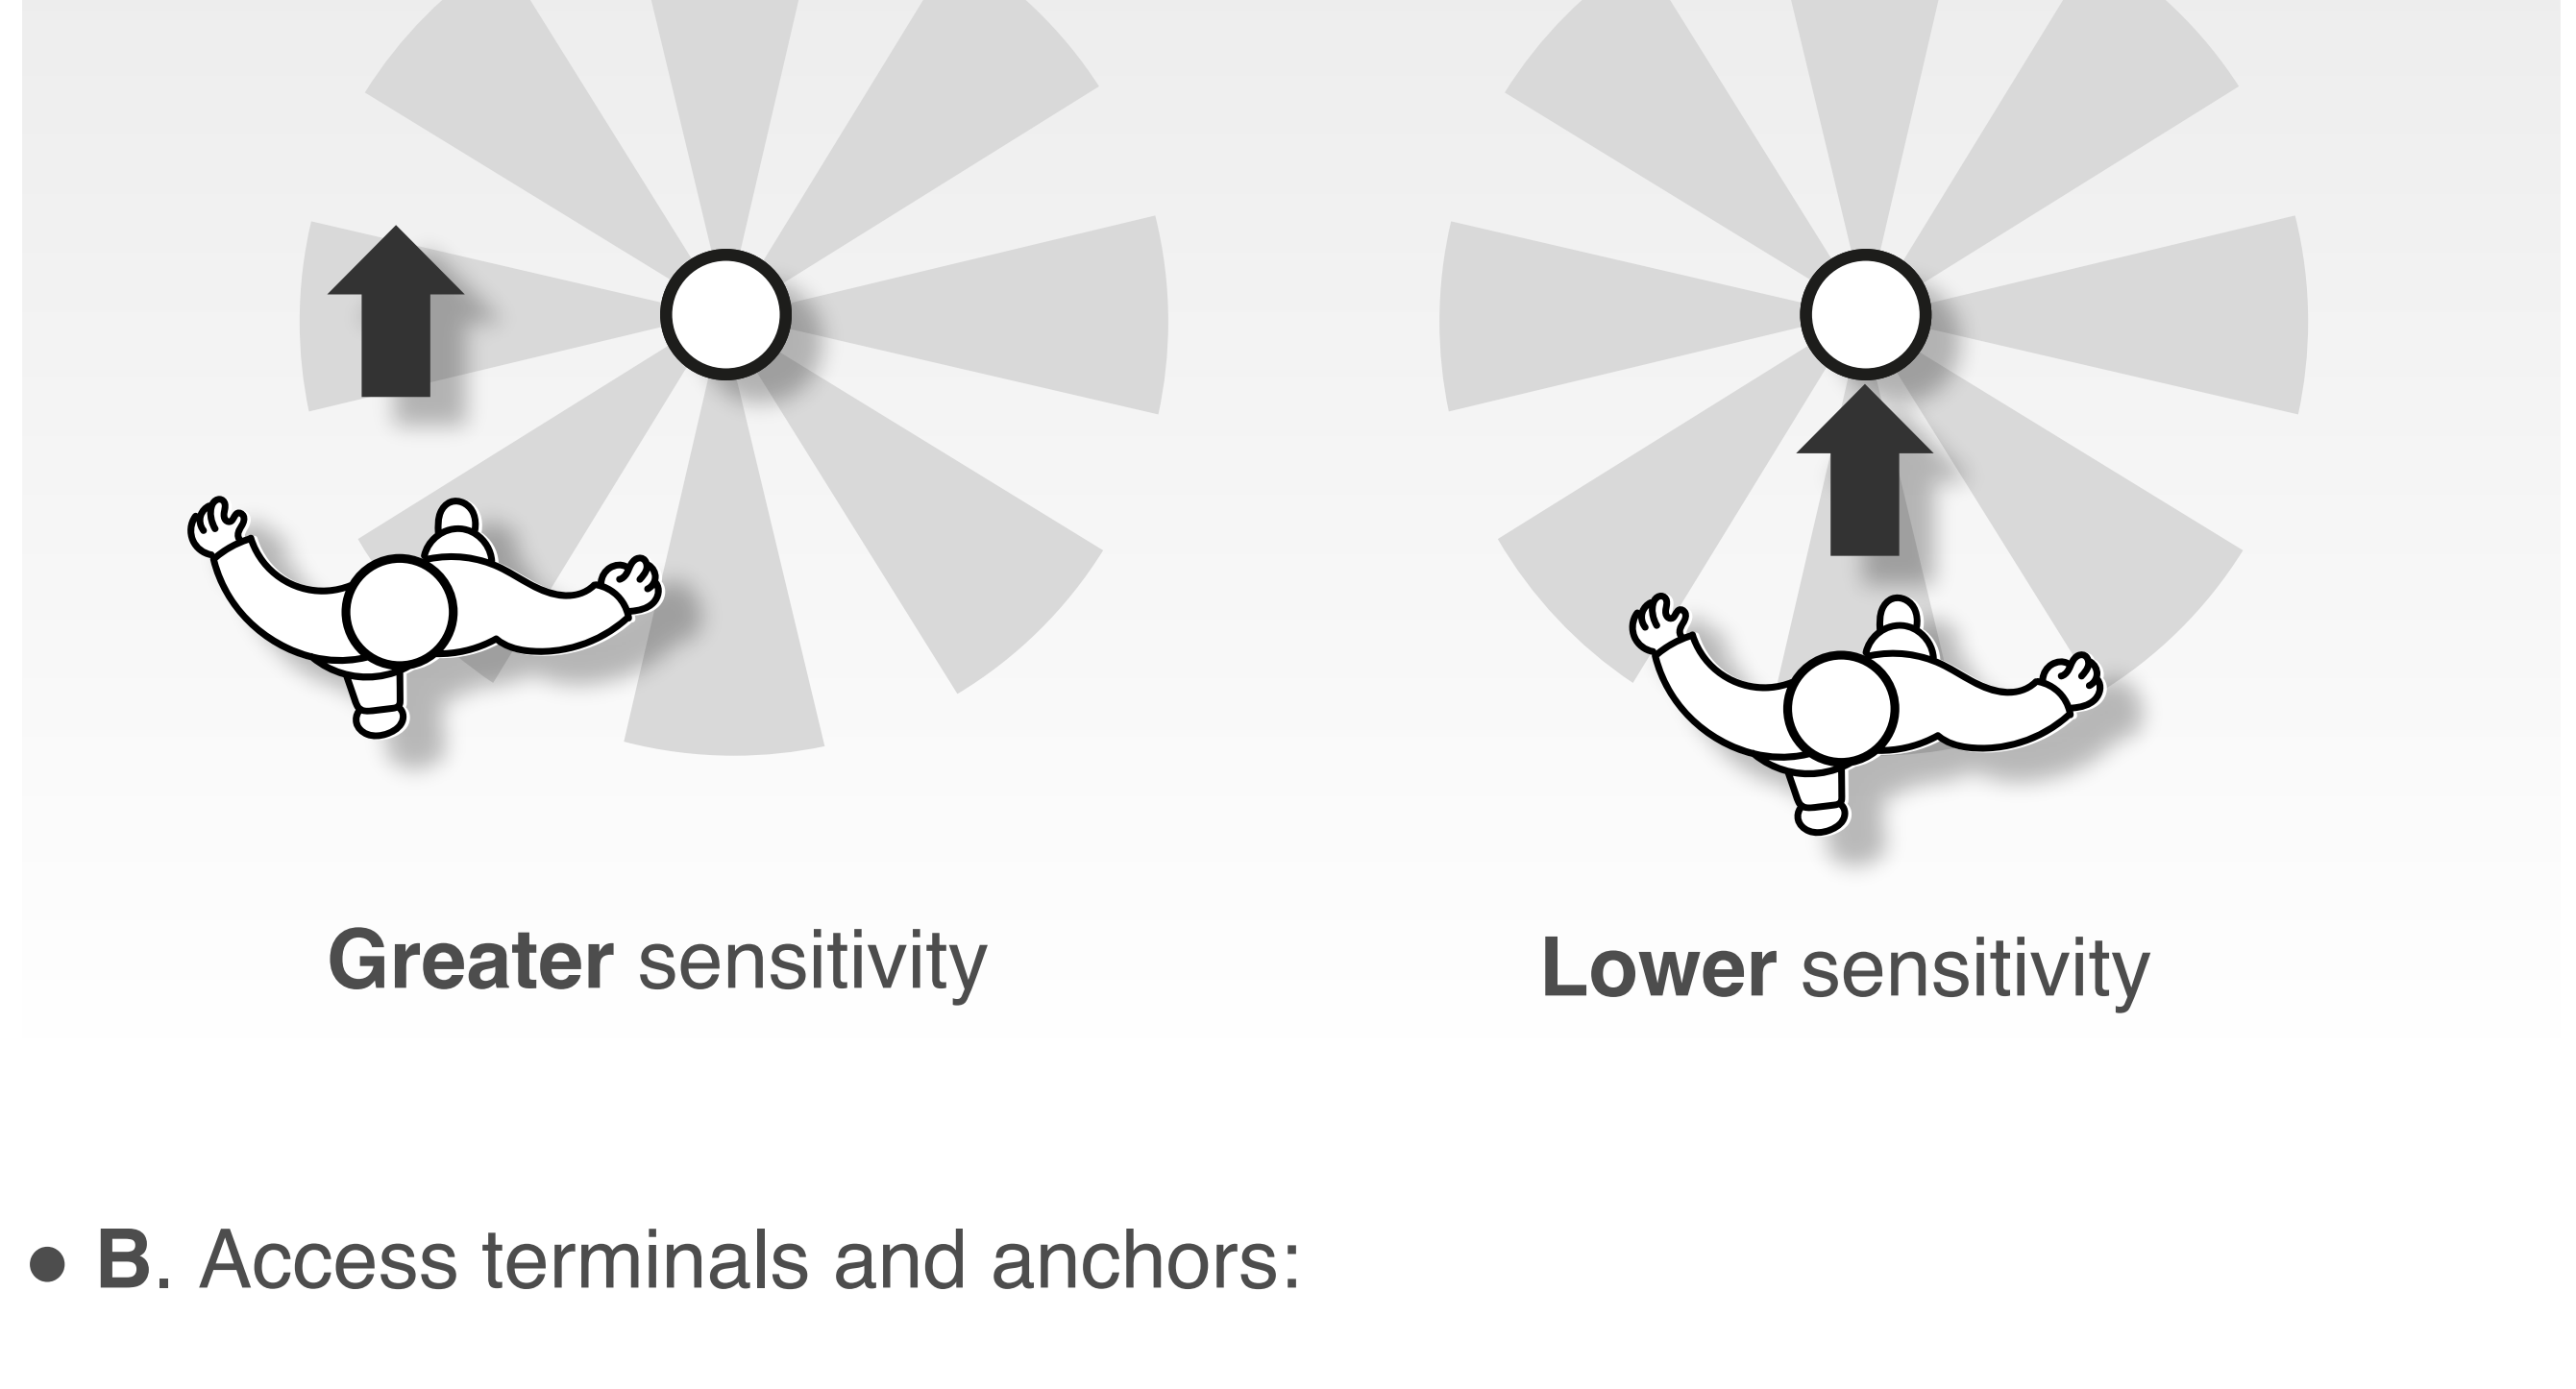


- **B. Access terminals and anchors:**


To access only to separate the cover.

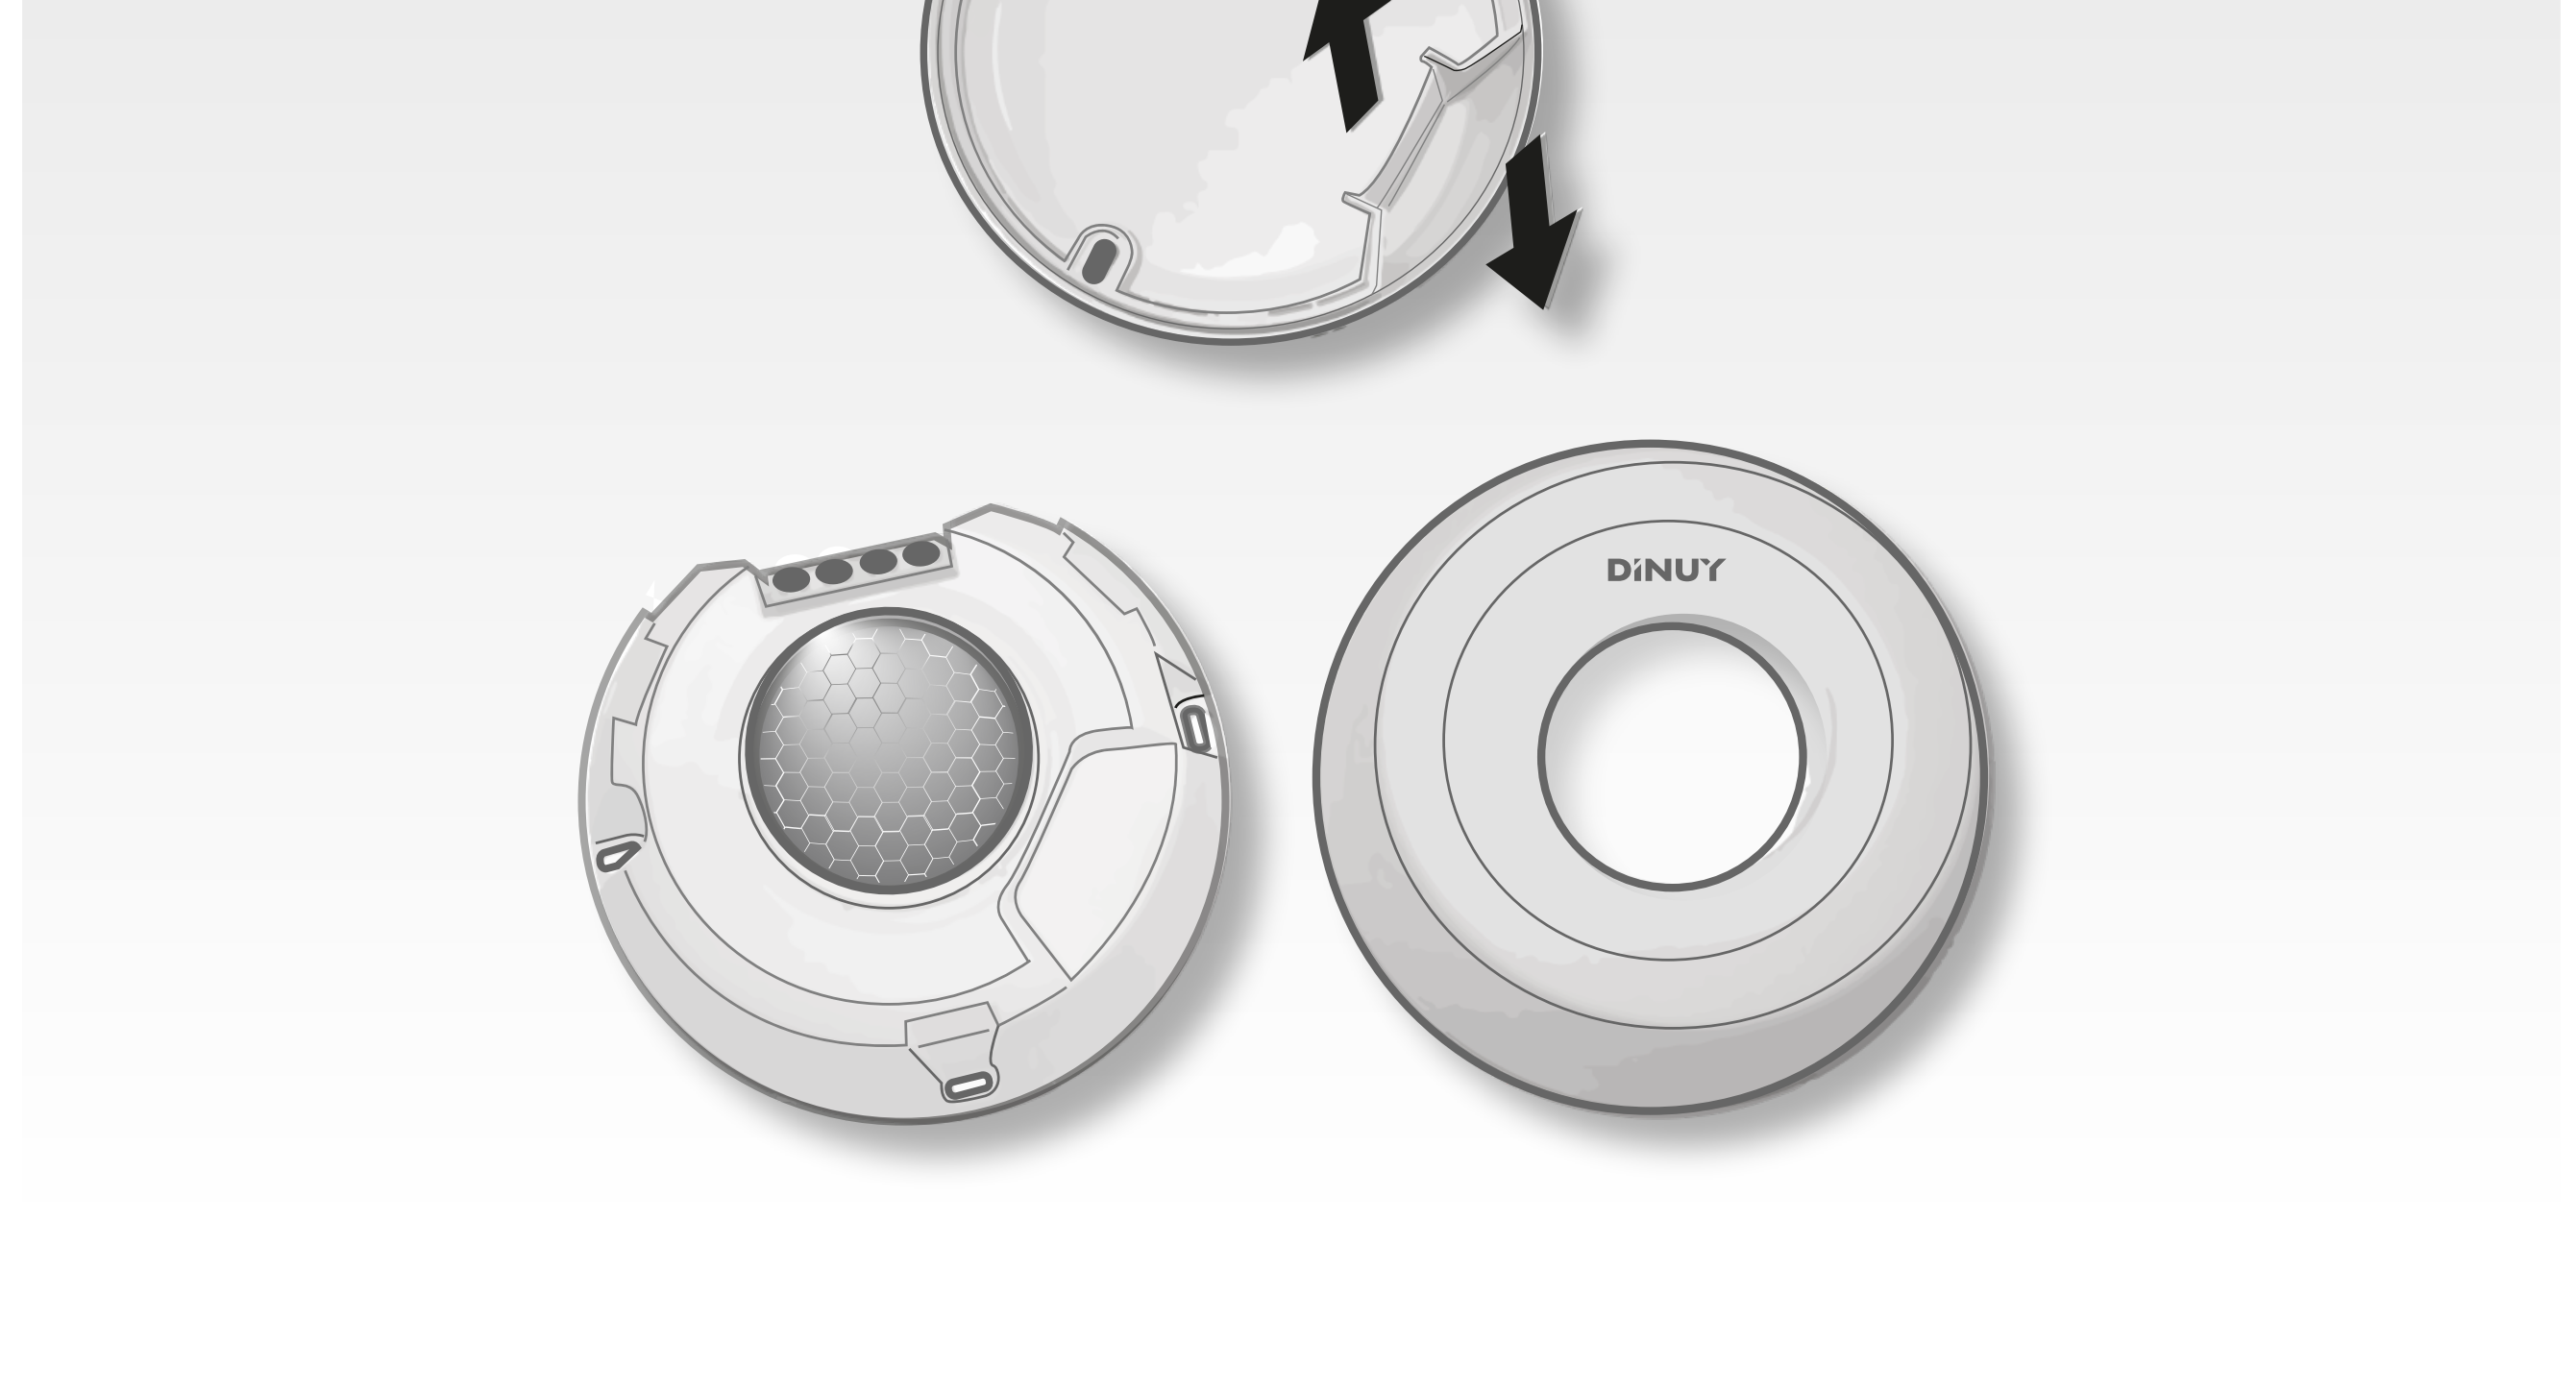

- **C. Mounting:**

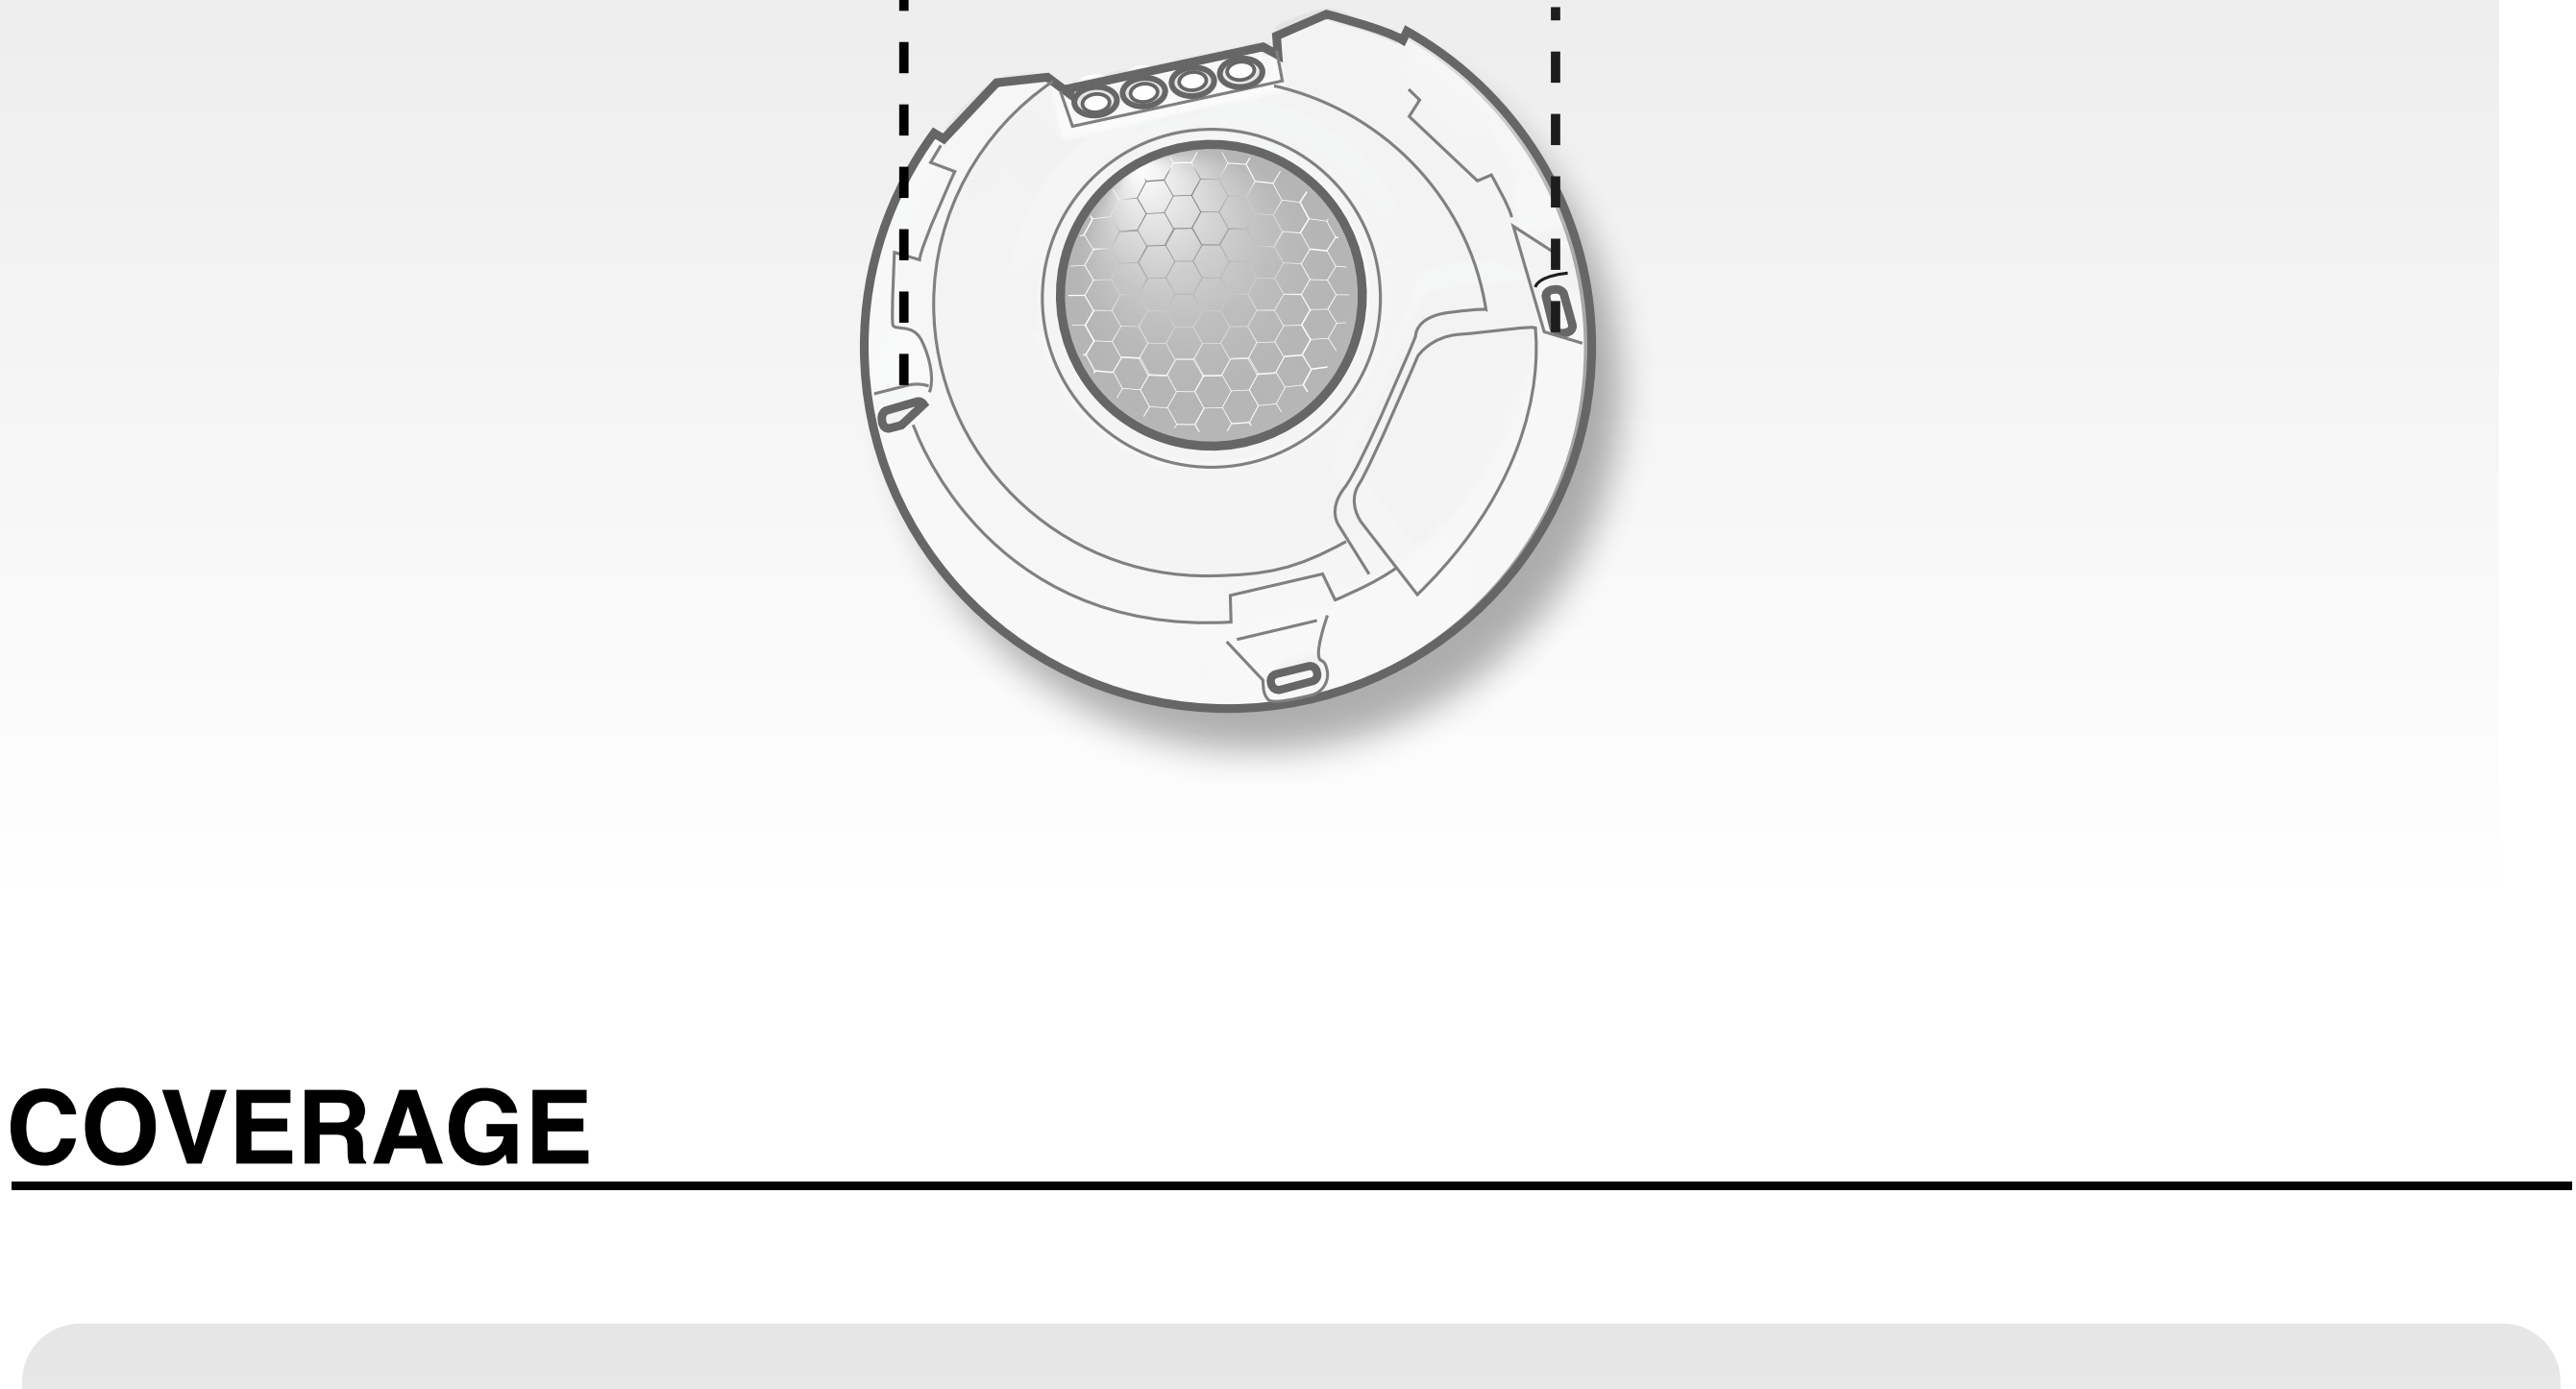


COVERAGE

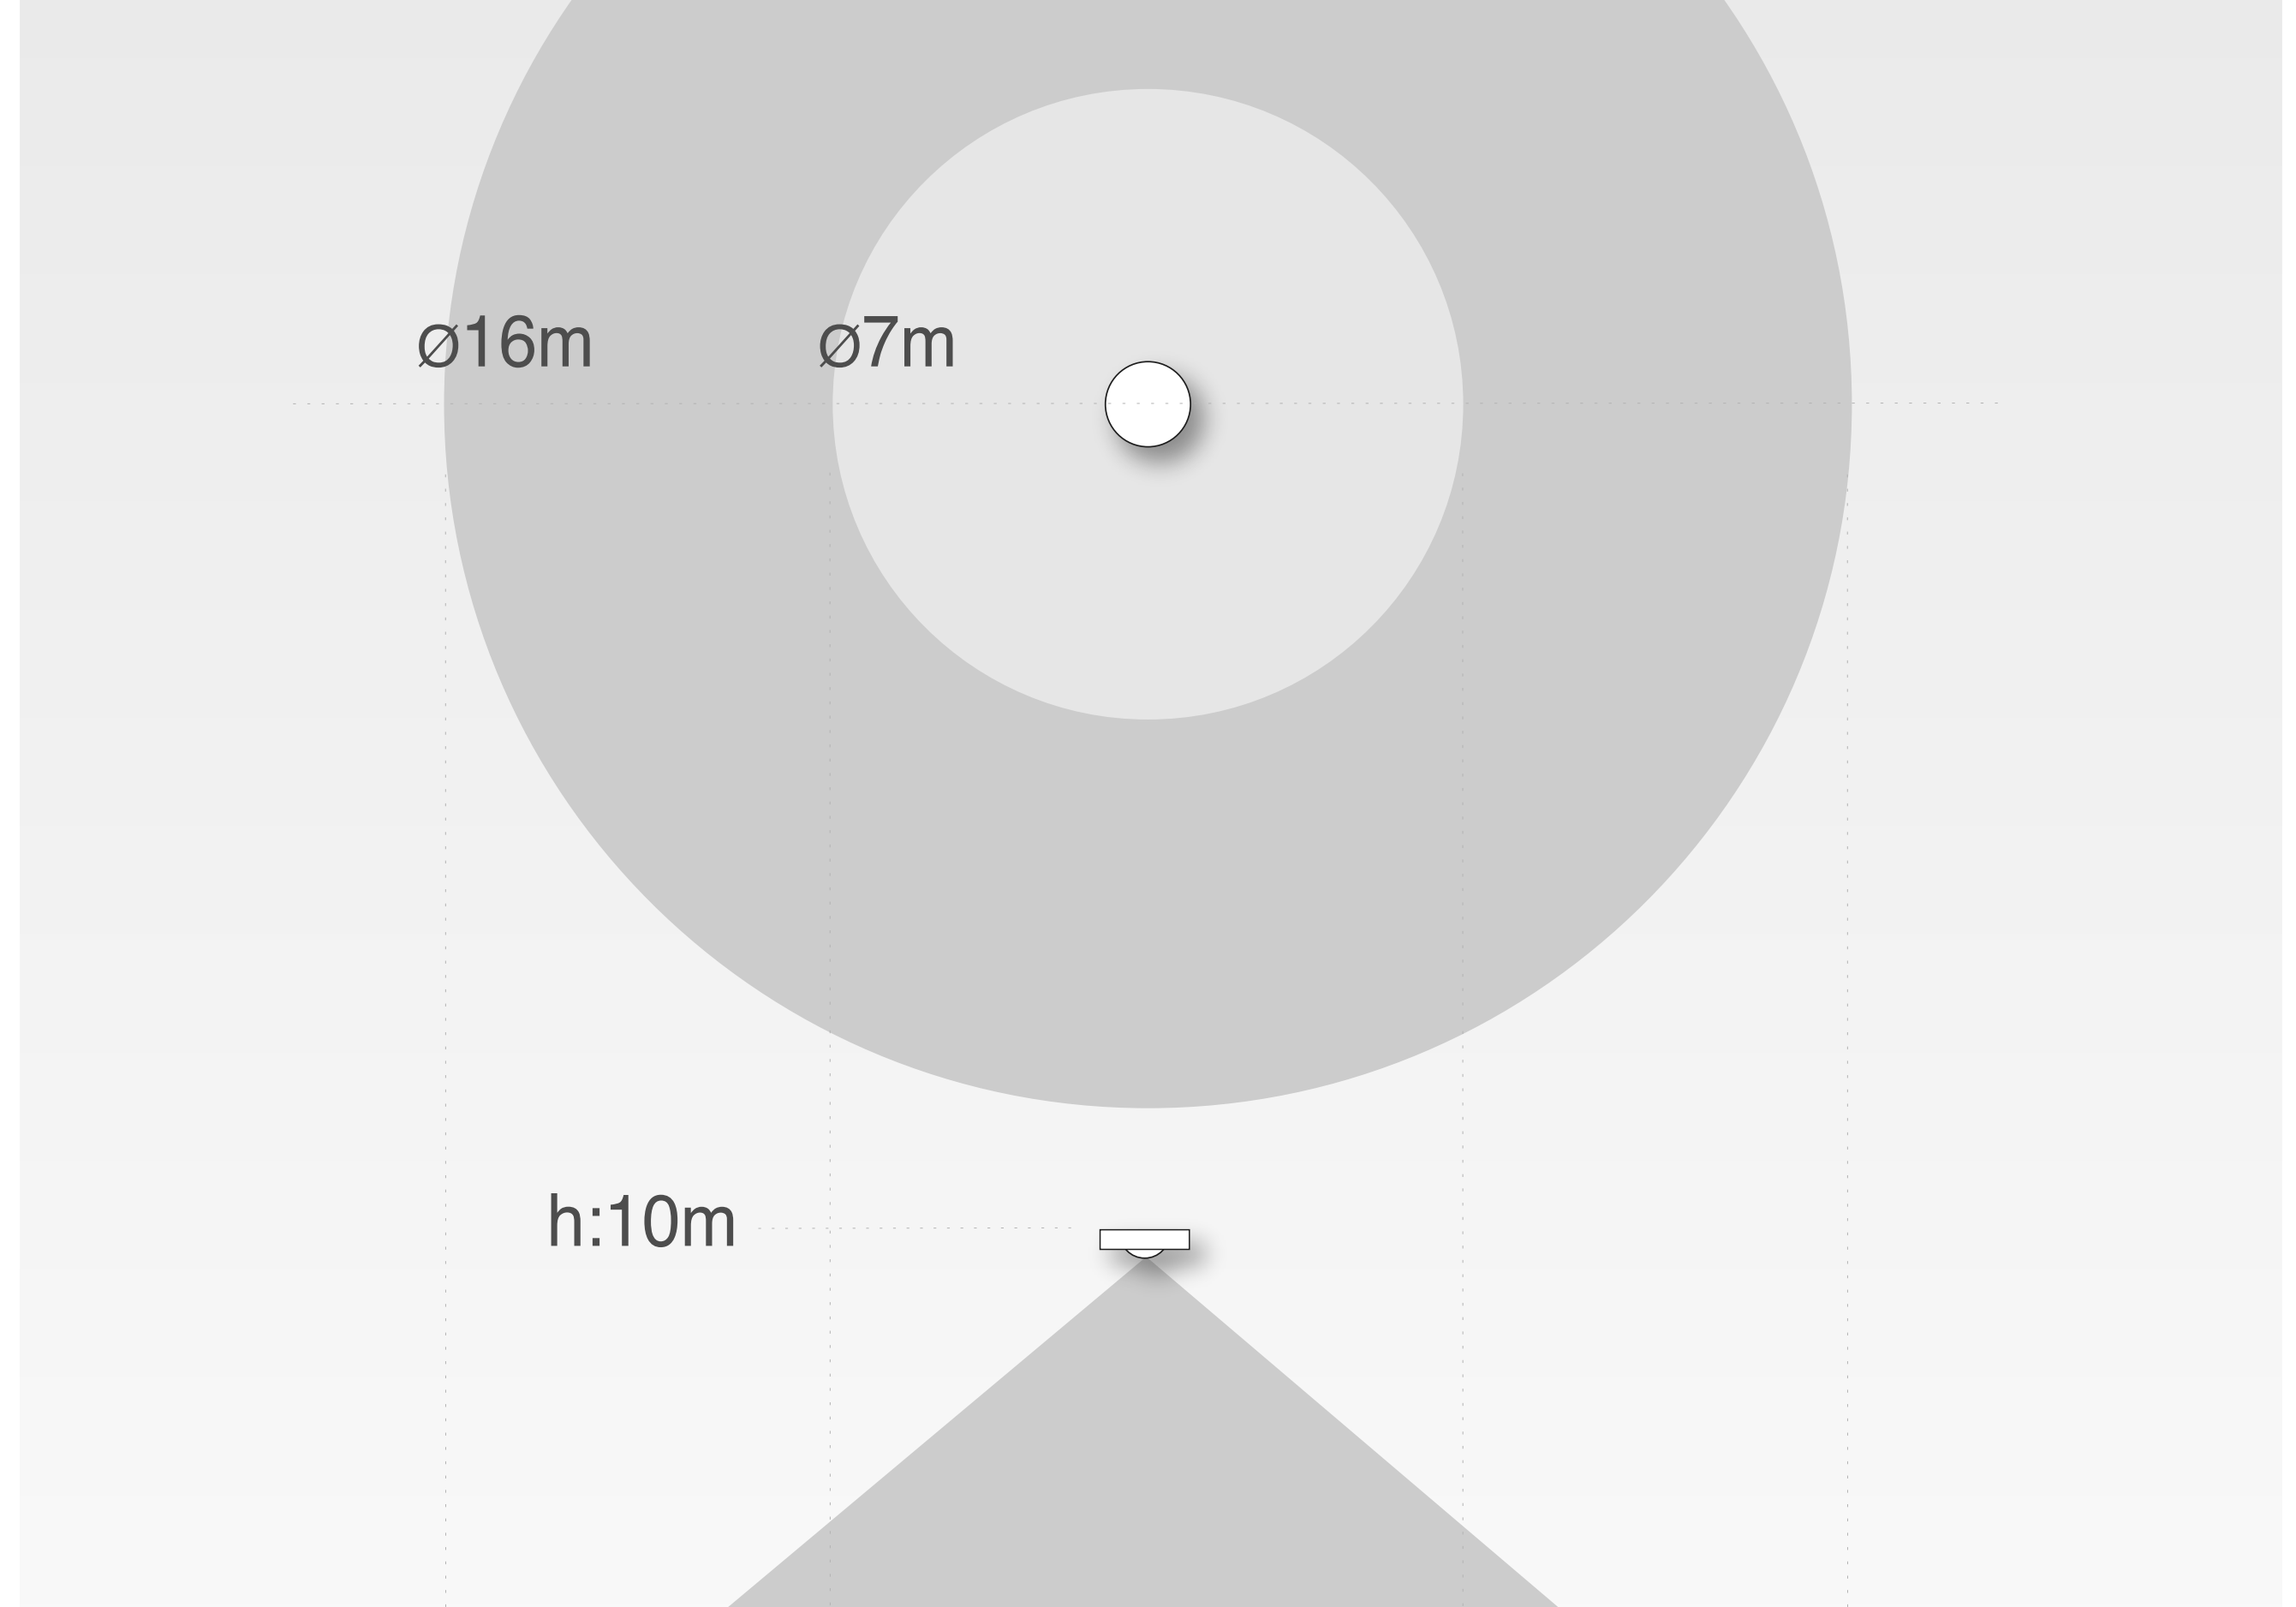



# INSTALLATION AND WIRING

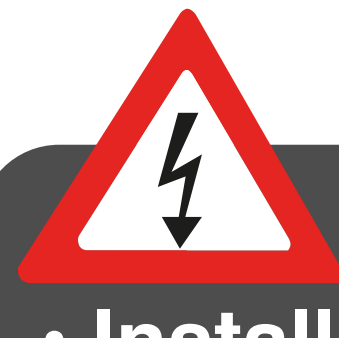

## ATTENTION: Dangerous voltage!


- Installation of electric equipment must be carried out by qualified professionals.
- Before you start making any connections, disconnect the power supply to avoid any risk.
- When some kinds of lamps blow, they can produce a very high current which could damage the detector.

### NOTE


*Once the detector is connected to the power supply, it is necessary to wait 30 seconds for it to stabilize. During this time, the device activates its output and does not respond to movement.*

- Follow one of the following diagrams to make the connection:

- Simple installation of a single detector:

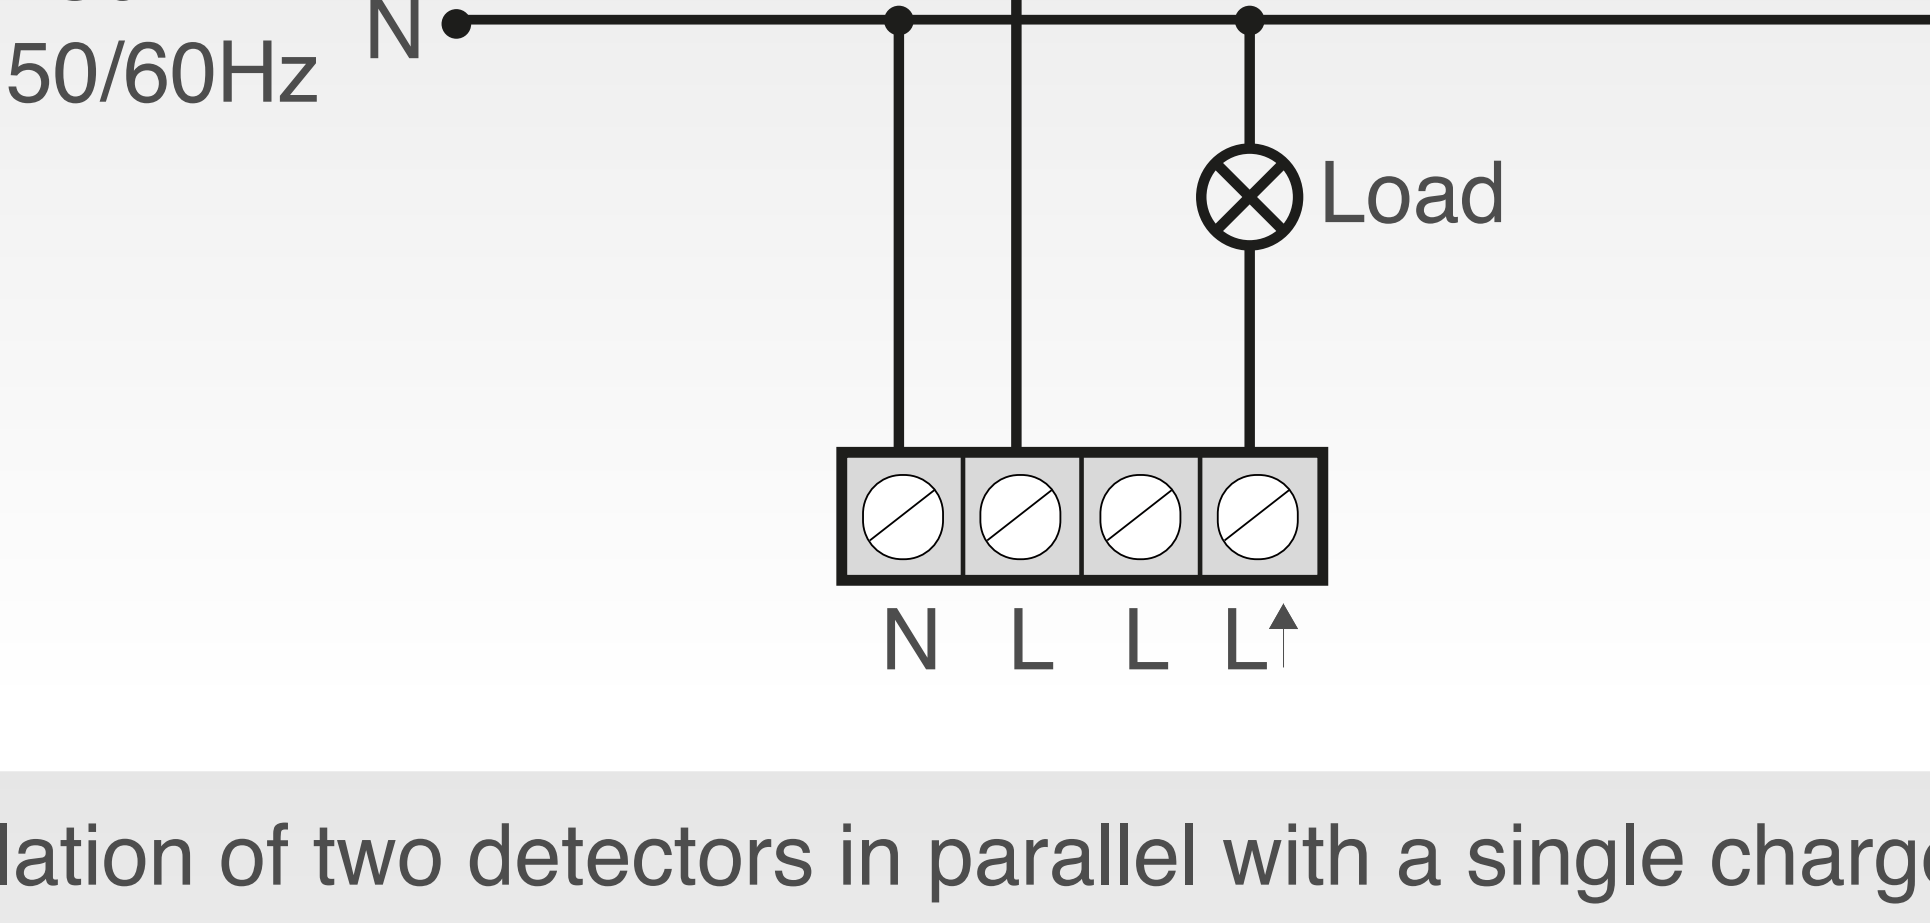

- Installation of two detectors in parallel with a single charge:

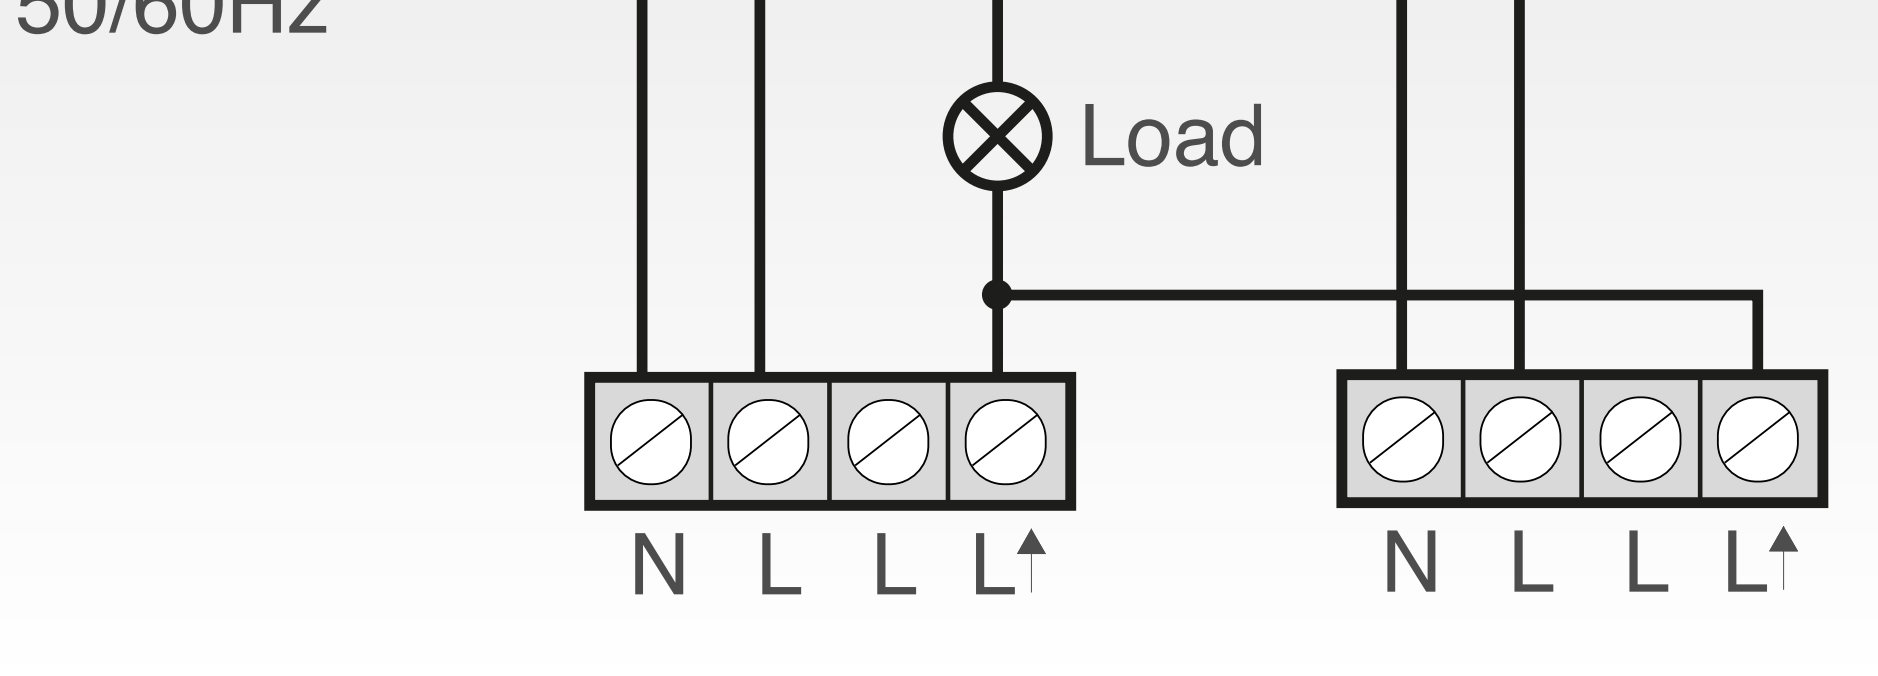

## SETTINGS

- ALL OPERATION SETTINGS OF THIS DETECTOR ARE EXCLUSIVELY CONFIGURED THROUGH THE DINUY CONFIGURE APP (see below).
- To consult about the installation of the App, menus, application of the configuration, or the resolution of problems related to the configuration, please consult the instructions for use of the DINUY CONFIGURE App.
- The basic operating values of this detector are 'Timing', 'Brightness' and 'Sensitivity' can be adjusted using the DINUY CONFIGURE App.

### - Timing Setting (TIME).

Factory setting: 1 minute.

Sets the time the charge will be on after detecting movement. The ignition time can be adjusted between 1sec. and 60min. After the first detection, the time will be reset and, each time a new movement is detected, the timing will begin again.

### - Brightness Adjustment (LUX)

Factory setting: Disabled.

Its function is to set the maximum luminosity value, above which the detector will not activate the load despite detecting movement. Furthermore, in mode Presence Detector if the set brightness level is exceeded while the lighting is activated (presence of people), the load will be automatically deactivated.

The user can set this value depending on their requirements, between 5 and 2.000 Lux and disabled.

If this parameter is set to a very low value, close to 5 Lux, the detector will only work in the dark, at night (in case there is not enough natural light).

If this parameter is set to the value Disabled, the detector will work in any light level, regardless of natural light, both day and night.

### - Sensitivity Adjustment

Factory setting: Very High.

This parameter allows you to limit the detection range and adapt the operation to, for example, unstable environments.

You can choose between 5 adjustment options:

- Very High
- High
- Medium
- Low
- Very low

## FUNCTION TEST

- The purpose of this test is to check and adjust the coverage area of the detector when it is first connected.

### NOTE

*Once the detector is connected to the power supply, it is necessary to wait 30 seconds for it to stabilize. During this time, the device activates its output and does not respond to movement.*

- The red LED visually indicates when motion is detected and works both when the load is on and off.
- This red LED will light up whenever motion is detected.
- Walk from outside the coverage area inward until the lights turn on.
- The blue LED indicates that the Bluetooth is activated and ready to receive the programming from the smartphone. Once the detector is powered at 230V~ the Bluetooth will be activated for a while. After this time the Bluetooth will be automatically deactivated. This time can be selected from 10 minutes to 4 hours. The factory setting is 2 hours.
- Once you have verified that the operation is correct, save the detector settings with the desired values

## COVER SHUTTER

- A cover shutter is included in the same detector box, which allows you to exclude areas from the detection area, as well as reduce the coverage area according to needs.
- In the event that the default detection area of the detector is too large, or it is detected in areas that are not desired, this area can be easily reduced simply by using the shutter covers.

## PROBLEM RESOLUTION

When the detector stops working normally, review the possible faults and the suggested solutions in the following table that will help you solve the problem:

| Problem   | Possible cause   | Suggested Solution   |
|---|--|--|
| The lamps do not turn on  | No voltage reaching the detector   | Properly power the detector  |
|   | Bad connection   | Check the connections and follow the instructions diagram  |
|   | Poorly adjusted LUX  | Check Brightness Adjustment setting  |
|   | Defective charge   | Replace the load   |
|   | Very high ambient temperature  | Wait for the ambient temperature to reduce and test the detector   |
| The lamps don't go out  | The set shutdown time is too long  | Reduce disconnection time and check that the lamps turn off after the time has elapsed   |
|   | The detector trips unexpectedly  | Stay out of the coverage area to avoid false activations   |
|   | Bad connection   | Make sure the charging and power are connected well  |
| Lamps turn on and off cyclically  | The load (fluorescence, contactor...) is generating harmonics that continuously trigger the detector with each switching | Move the detector away from the load or place an RC harmonic suppression filter (AC DM-002) between L' and N   |
| Unwanted activations  | Heat sources, drafts, reflective surfaces or objects that move due to wind   | Avoid directing the detector towards heat sources, such as air conditioners, fans, radiators. Make sure there are no objects that move with the wind. Reduce the Sensitivity of the detector with the APP Dinuy Configure. |
| Lamps work in reverse, turning on when they should be off, and off when they should be on | The Output Polarity is set in reverse  | Make sure you change the Output Polarity in the ADVANCED MENU  |